



# PRO FLEX CROPLIFTER MOUNTING INSTRUCTIONS

## INFORMATION

Due to diverse header types, different mounting kits are available. Refer to the Mounting Kits page for the correct kit, or for more information, go to:


[www.agpoint.com.au](http://www.agpoint.com.au)

[www.schumacher-original.com](http://www.schumacher-original.com)

**PRO FLEX LIFTER**  
by SCHUMACHER

## STEP 1


Remove bolts

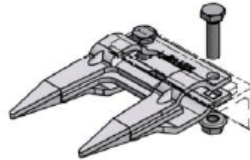

Remove existing bolts. It is recommended that you mount one *Pro Flex* croplifter on every 4th guard tip (every second guard)

## STEP 2

Mount croplifter

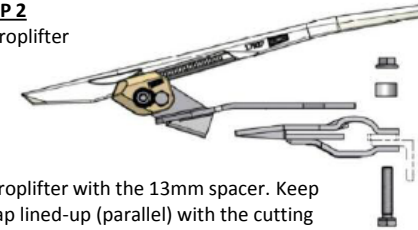


Mount the croplifter with the 13mm spacer. Keep the lifter strap lined-up (parallel) with the cutting gap on the guard

*You may need to add flat washers on some guards*

## STEP 3


Push lifter all the way in, tighten nuts to 45Nm (33ft/lb)

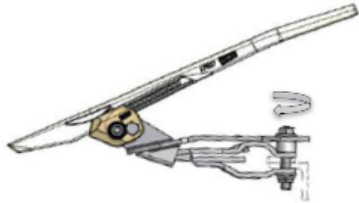

## STEP 4

To change the angle, undo nuts on **both** sides


Undo left **and** right side nuts

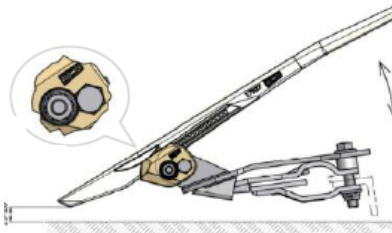

## STEP 5

To change length, just undo **one** nut only




Undo either left **or** right nut

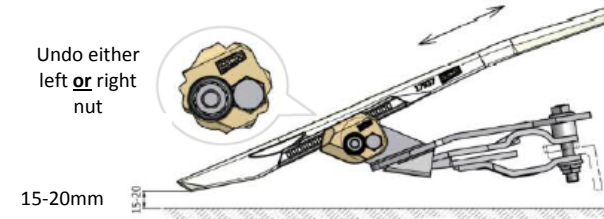

**PRO FLEX LIFTER**  
by SCHUMACHER

General mounting instructions for *Pro Flex* croplifter, dependant on guard and Mounting Kit

**Mount croplifters (usually every 4th guard tip or every 2nd guard) and lower the header front to working position. Adjust the croplifters to get a 15-20mm clearance with the ground (approx width of a thumb) as shown below.**

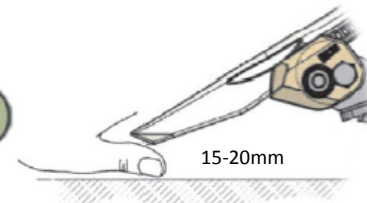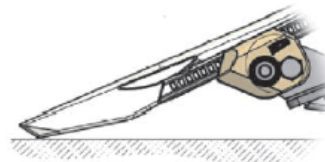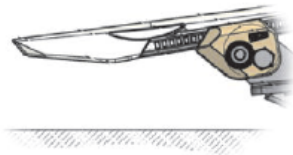

**SCH**  
GEBR. SCHUMACHER